



Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through cable gland and connect to screw terminal.
- Tighten cable gland and screw lid back in to place by four screw with a torque of 2Nm to ensure IP-grade.
- Fasten bracket with one to three screws.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- HP-20EExIIN(T) is designed for Zone 2 environment.
- Use only certified/specified cable glands and blanking plugs, reflecting the same IP rating and temperature range as the loudspeaker.
- Standard model delivered with two M20 Ex approved plastic blinding plugs.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with a two years warranty against defective workmanship.