



Web-Site..... www.dnh.no

# DSP-25EExmN(T)

### **ENGLAND DNH WW Ltd**


Phone.....+ 44 1908 275 000 Fax....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk

#### <u>GERMANY</u> **DNH GmbH**

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail..... .....dnh@dnh.de


# DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

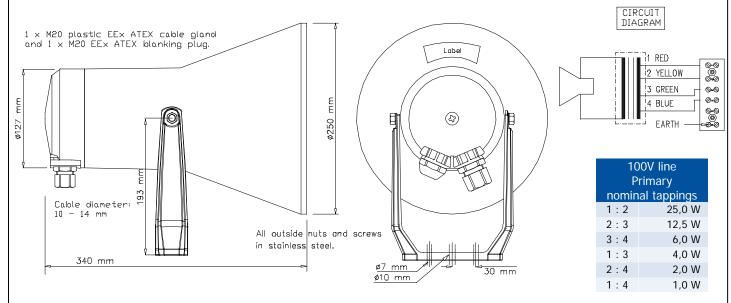

Certified by / Certification code / Number: NEMKO / Ex d e mb IIB+H₂/IIC T5 Gb / 10ATEX1053 ⟨€x⟩ II 2G



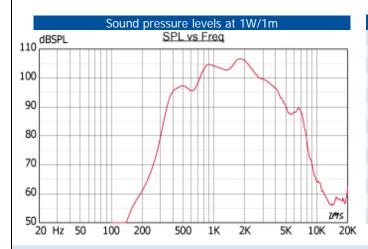

Specifications	IIB	IIC
Material / Color	Anti-static polyamide / Black	
Mounting	Bracket	
Termination	e-chamber, screw terminals	
Weight w/transformer	4,0 kg	
IP-rating (e-chamber)	66	
Max. / min. amb. temp	55°C / -53°C	
Rated / max. power	25 W / 25 W	
SPL 1W/1m	106 dB	102 dB
SPL rated power	117 dB	113 dB
Effective freq. range	370 – 7000 Hz	400-7000
Dispersion (-6dB) 1kHz / 4kHz	110° / 30°	100° / 30°
Directivity factor, Q	1,8	
Options	Impedances, colors, labels	

### **Installation, Operation and Maintenance Procedures**

- Remove lid by 1 screw, lead cable through the cable gland and connect to terminal with required tapping.
- Screw lid back into place by 1 screw with a torque of 1 2 Nm to assure the IP rating.
- Fasten bracket with 1 3 screws.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- Use only certified/specified cable glands and blanking plugs, reflecting the same IP rating and temperature range as the loudspeaker.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.